



IN THE BOX


ShowMo guarantees that we only sell brand-new products to our customers. If your package appears to have been opened or parts are missing, please contact support@showmo365.com for a replacement.

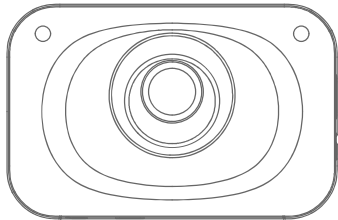


WinEye
Camera*1

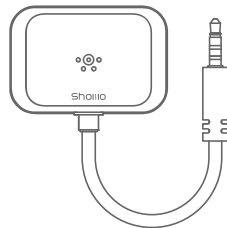

MIC
Box*1

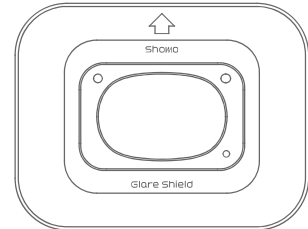

Window
Glare Shield*1

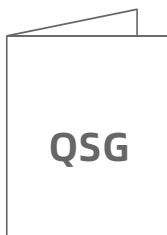


Quick Start
Guide*1



Surveillance
Sign*1




Adapter*1

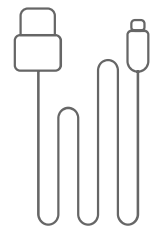


USB
Cable*1



Sticker for
Magnetic Plate*1

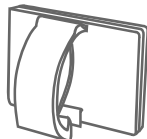

Cable
Clips*6

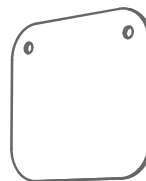


Magnetic
Plate*1




Aluminum
Foil Sticker*1

PRODUCT OVERVIEW

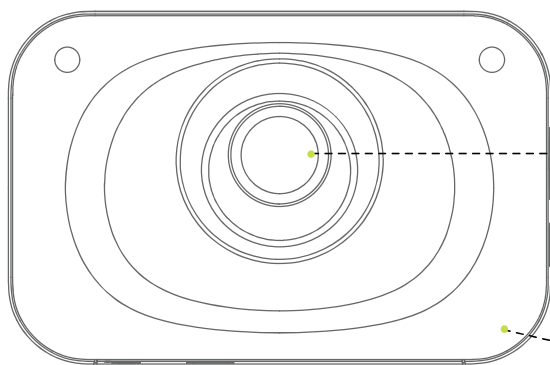

Lens

Magnetic Base

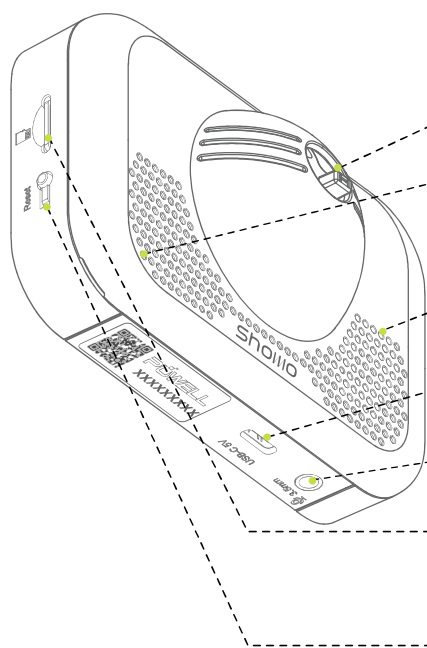

**Camera Adjustment
Bar**

Indicator Light

Speakers

Type-C Port

External MIC Port

MicroSD Card Slot


Reset Button

SETTING UP


1. Download the ShowMo app and create an account.



2. Plug the USB cable into the product port and the power source.

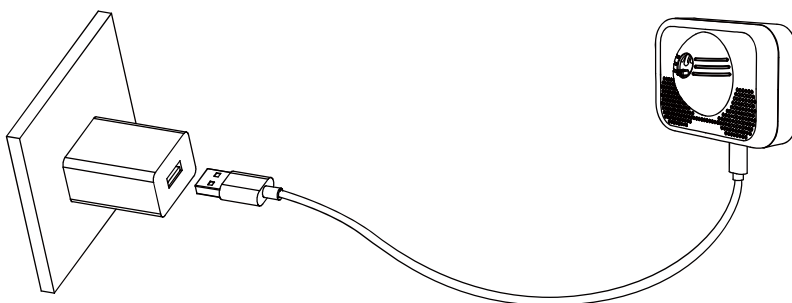


3. Open the ShowMo App, tap “Add Device” on the home screen, and follow the on-screen prompts until the device is successfully added.

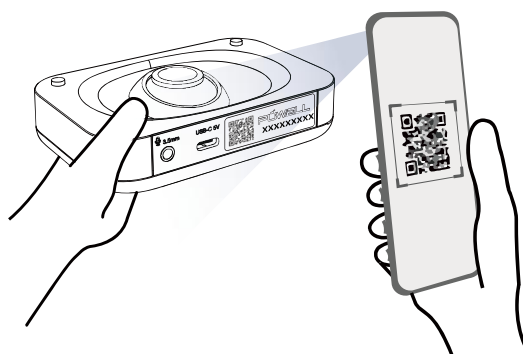



MOUNTING

Install the Camera on a Glass



1. Select the installation location and wipe the glass clean.

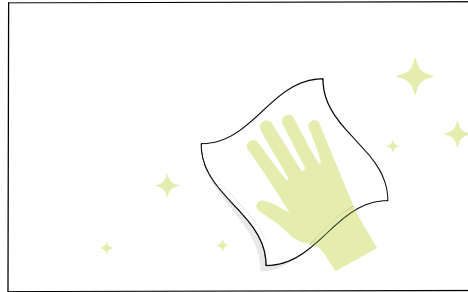

2. Peel off the backing from the Window Glare Shield and stick it to the window.

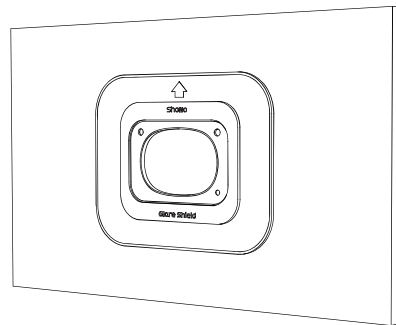
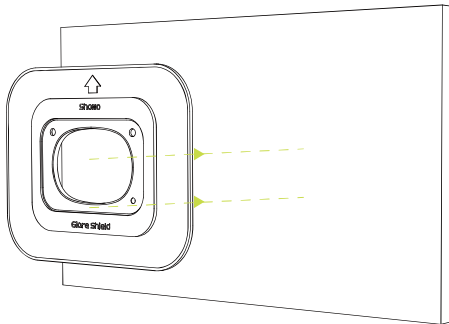


3. Ensure the device is powered on and the Window Glare Shield is securely attached to the glass. Then, place the device firmly into the mount, ensuring it clicks fully into place with no signs of looseness.


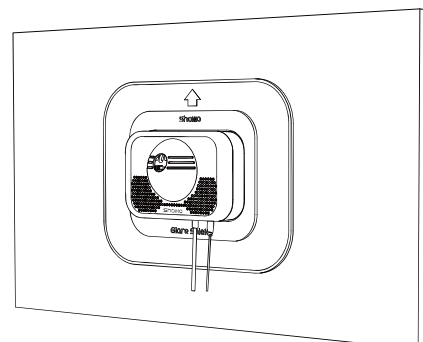
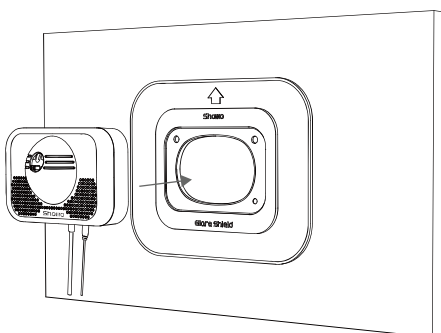


Install the MIC Box with Magnetic Plate



1. Clean the glass surface where the sticker for magnetic plate will be applied. Peel off the protective film from one side of the sticker for magnetic plate and align it with the upper section (where the two screw holes are located) before adhering it in place.

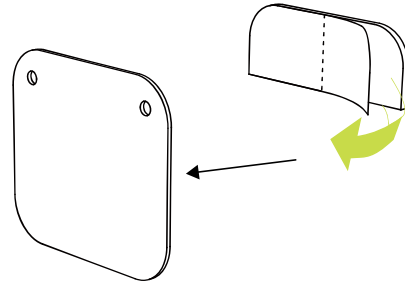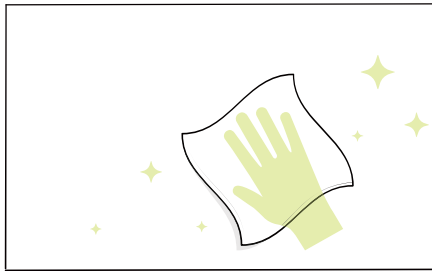


2. Remove the sticker from the other side of the magnetic plate and affix it horizontally to a clean, dry glass surface (ensure the screw holes face upward). Press evenly across the magnetic plate with your hand to ensure complete adhesion, then let it stand for one minute.

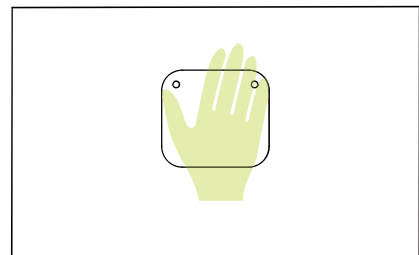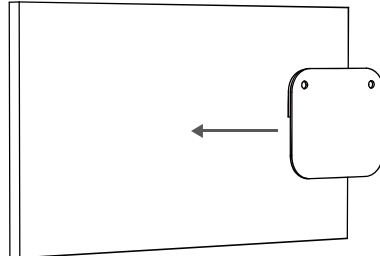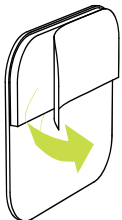


3. Align the MIC box with the magnetic plate along the top edge. Snap the MIC box into place to ensure it is securely installed.

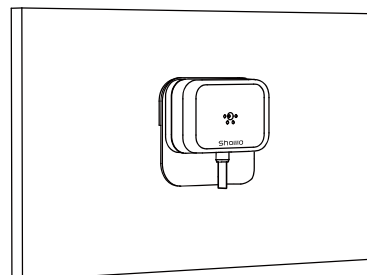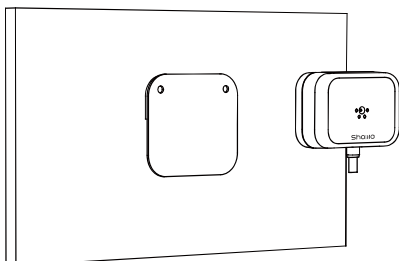

4. Cut the Aluminum Foil Sticker to an appropriate size, then attach it to the cable and fix them together on the window.

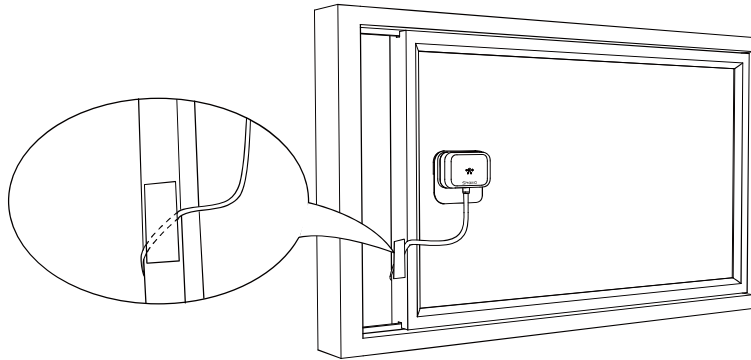

5. Connect the other end of the cable firmly to the external MIC port of the camera.

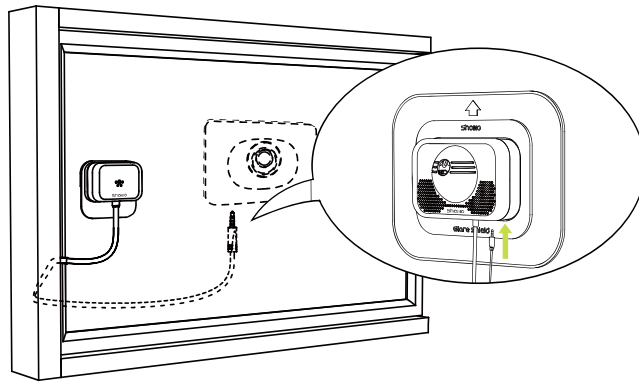

6. Attach the cable clips to the corresponding positions according to the wiring layout for cable organization.

